

 
General

DALI Protocol (digital addressable lighting interface) is the international standard lighting control communication protocol, with the group dimming, addressing dimming, a variety of scene mode settings and other powerful dimming functions, through two-way data exchange to monitor and control each device. SKYDANCE is one of the DALI Alliance (DiiA) Members and some products such as DA1, DA4, DH have passed DALI2 certification. Our DALI series products include DALI constant voltage LED dimmers, DALI constant current LED dimmers, DALI AC switches, DALI triac dimmers, DALI 0/1- 10V converters and DALI dimming constant voltage/current drivers and various types of DALI master controller, and so on, follow the IEC62386 standard and can be connected to any device conforming to DALI protocol on the same bus control.

Packing List

	
DALI controller (optional) 1 pcs	User manual 1 pcs

Outsourced parts

						
Switching power supply	CCT master	RGBW master	DALI host computer	Signal wire (cuts required)	Power wire (cuts required)	CCT or RGBW LED strip

Notes:

- The output voltage of the switching power supply must be the same as the supply voltage of the light strip, and the output power of the switching power supply ≥ 1.25 times the total output power of all the connected light strips
- When the controller is dimmed, the switching power supply may emit noise that can be heard by the human ear (20~20KHz), and it is recommended to use the glue filling switching power supply in places with noise requirements.
- The controller is a constant voltage type, for the switching type constant voltage/constant current conversion lamps, not guaranteed adaptation, dimming process may flicker, subject to actual measurement, the maximum access power of such lamps can not be higher than 50% of the rated power of the controller, otherwise it is easy to cause damage to the controller.


Wire selection:

Wire (signal wire) can choose copper wire or aluminum wire, the cross-sectional area is 1.5mm²,
 Example: Copper wire diameter > 2mm² can basically reach the maximum transmission distance, < 1.5mm² will have a serious impact.
 When need to increase DALI signal transmission distance, it is recommended to choose a wire with a cross-sectional area of 1.5mm² or more..

Material	Copper						
Wire diameter (mm ²)	0.14	0.50	0.75	1.00	1.50	2.00	2.50
Max. distance (m)	31	112	168	224	300	300	300
Material	Aluminium						
Wire diameter (mm ²)	0.14	0.50	0.75	1.00	1.50	2.00	2.50
Max. distance (m)	19	68	102	136	205	273	300

Installation steps


- Understand the DALI system architecture, according to the application scenario, select the appropriate DALI controller. DALI controllers include constant voltage series, constant current series, triac series, 0/1-10V series and AC switch. The DALI controller is responsible for executing dimming commands in the light control system, which can be matched by users according to their needs. Example: TD2-4S, TD4-4S as DALI master, DA-PS-L as bus power supply, and multiple DA4-L as controller (CCT or RGBW light type can be set by key), connecting the switching power supply and CCT / RGBW LED strip to form a simple light control system to realize the CCT / RGBW light adjustment.

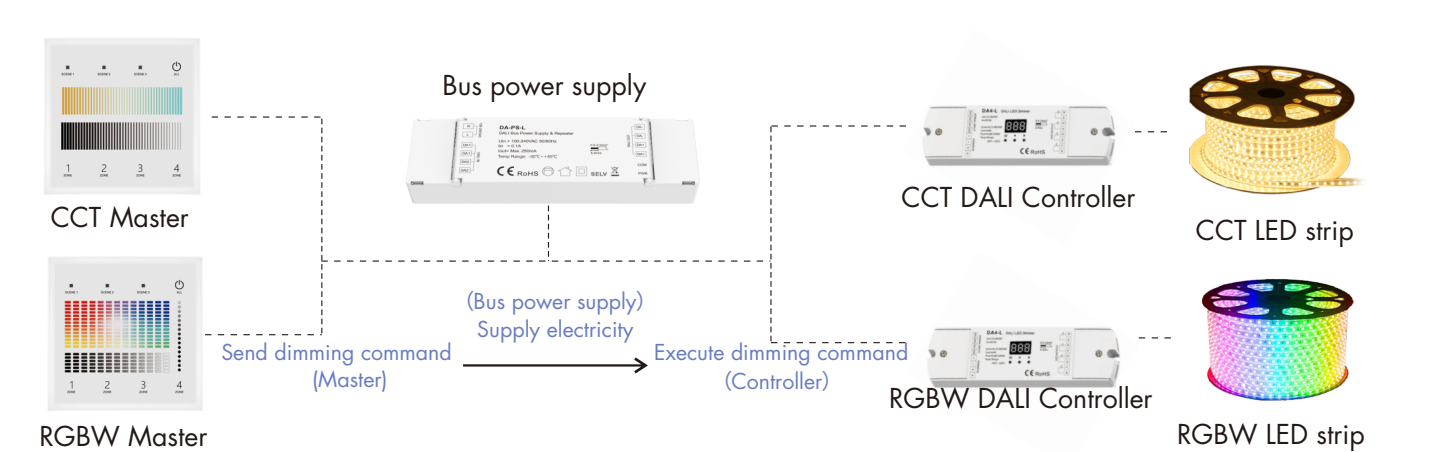

2 Connect the DALI controller, DALI master control panel, and DALI bus power supply to the same DALI bus, and connect and label the switching power supply, and light strip to the DALI controller.



- Notes:
1. AC input class DALI controller/dimming driver can be directly connected to the AC mains power, no need to connect the switching power supply.
 2. For the DALI controller with set buttons and display screen, DALI address can be assigned manually or automatically by the DALI host computer.
- 3** 4 DALI controllers with 4-zone DALI color temperature panel, set the DALI address through the controller buttons to realize the zoned dimming and color temperature adjustment effects.

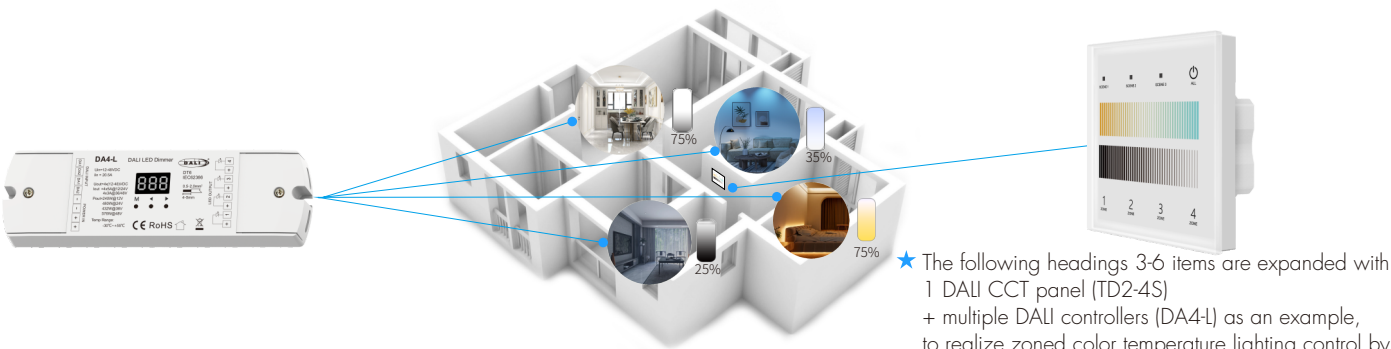

Operation steps:


1. Set the DALI addresses of the four DALI controllers (DA4-L) separately

- Step 1: Set the DA4-L controllers to the color temperature type output, that is, 1 DA4-L controller occupies 1 DALI address.
First long press M key for 2s, then short press ◀ or ▶ key to select "C2".
- Step 2: Set the DALI addresses of the four DA4-L controller to A40, A41, A42 and A43 respectively.
First Long press ◀ or ▶ key for 2s, then short press ◀ or ▶ key to set DALI address.
- Step 3: The default PWM frequency of DA4-L controller is 2 KHz.
Try modifying the PWM frequency if the cell phone is shooting lights with significant ripple or if the switching power supply is noisy.
Long press M & ◀ key for 2s, then short press ◀ or ▶ key to select different PWM frequency, for example, select "F80" (8KHz).




2. Sets the address of the 4-zone DALI color temperature panel (TD2-4S)

Addresses are set through knobs on the back of the panel, for example, set the two knobs to X=4 and Y=0.
At this time, zone 1, 2, 3, and 4 will control the DALI controllers for addresses A40, A41, A42 and A43 respectively.

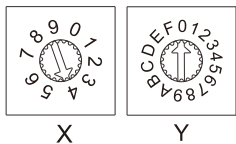


3. 4-zone DALI color temperature panel (TD2-4S) function

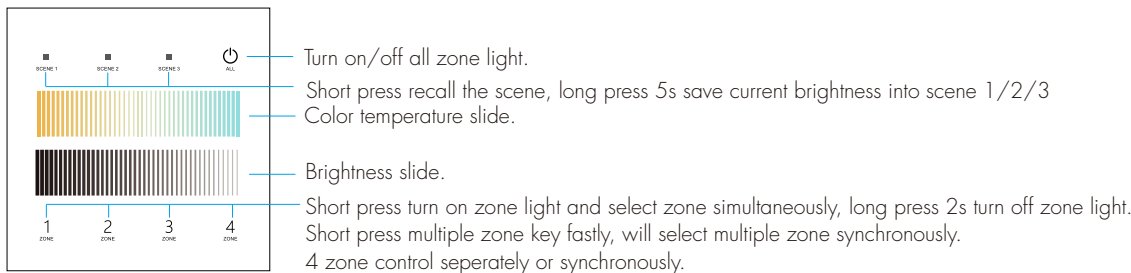

4 Set address, group, scene and system parameters of TC devices by the host computer.

Each lamp has an independent address, a standard DALI bus link can control up to 64 lamps, if more than this number, require another DALI bus link to control. To realise single-lamp or group control, address assignment and group setting of the control device should be carried out first. Set address, group, scene and system parameters on the host computer based on the application scenario. For DALI constant voltage/current controllers or DALI dimmable drivers without address setting keys or displays, short address (Short Address) assignment can only be performed by the host computer.

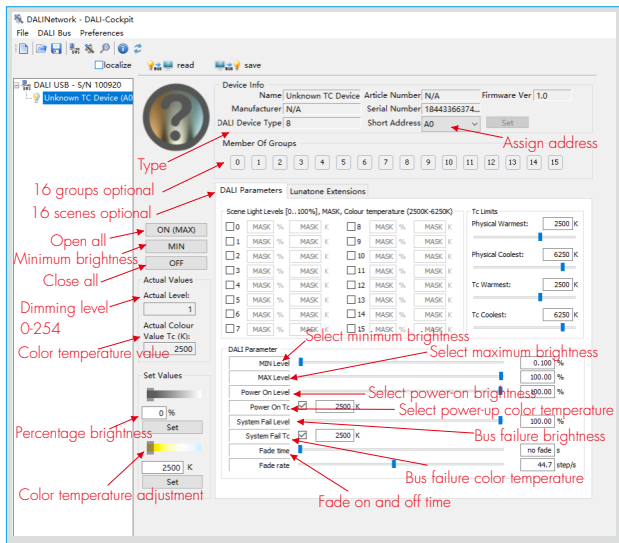

Example:

1. Select device, assign address

Click "Short Address" and select addresses A0-A63.

2. Setting Group

Under "Member Of Groups", click 0-15 to set the group.

3. Setting the scene

Under "Scene Light Levels", click 0-15 to set the Brightness and Color Temperature values in the MASK value (0-100%).

4. Setting DALI system parameters

Slide the "MIN/MAX Level" bar to set the min/max brightness respectively;

Slide the "Power On Level" bar to set the power-on default brightness;

Edit "Power On Tc" to set the power-on default color temperature value;

Slide the "System Fail Level" bar to set the bus fault brightness;

Edit "System Fail Tc" to set the bus fault color temperature value;

Slide the "Fade time/Fade rate" bar to set the fading time/fading speed respectively.

5 Through the host computer to realize the precise dimming and color temperature control of single lamp or group.

1. Single lamp control

 
For DALI controllers with set keys and display, set the DALI address by key.

Long press ◀ or ▶ key for 2s, enter DALI address setting status.

then press ◀ or ▶ key to set the value of DALI address.

Setting range is 00-63-FF (FF means unassigned address).

For example: The controller sets the 01 address and controls the lamp at the 01 address.



For DALI controllers without set keys and displays, address assignment can only be done by the host computer.

Select a device, click "Short address" to assign address, and the set range is A0-A63.

For example: select A1, controls the lamp at the 01 address.

Then select A1 from the device list on the left,

set the light brightness (Actual Level), click ON (Max) or Off to turn on /off light, to realize the brightness adjustment and on/off control of 01 address lamps.

2. Group control

When using the group control method, multiple DALI controllers need to be grouped by the host computer, and different DALI controllers are assigned to the same group for group control.

For example: click A1 device, select the 0th group among 16 groups, and then click A2 device, the same select the 0th group among 16 groups, and so on, to assign the devices that need group control to the same group.

Then select Group 0(G0) from the device list on the left,

set the light brightness (Actual Level), click ON (Max) or Off to turn on /off light, to realize the brightness adjustment and on/off control of Group 0(G0).

6 Multiple DALI controllers with 4-zone DALI color temperature panel for multi-light multi-group control.

1. When multiple DALI controllers have been set up in groups via the host computer, you can select the group mode through the panel for zoning control, each 4-zone color temperature panel (TD2-4S) can control four consecutive group address.

Example: Group multiple DALI controllers according to the application requirements, set Group 5 (G5), Group 6 (G6), Group 7 (G7), Group 8 (G8) group address respectively.

Then set the two knobs on the back of the color temperature panel to X=7 and Y=5,

that is, the group address value corresponding to partitions 1, 2, 3 and 4 are set to 5, 6, 7 and 8 respectively.

Zone 1 controls all DALI controllers under Group 5 (G5),


Zone 2 controls all DALI controllers under Group 6 (G6),

Zone 3 controls all DALI controllers under Group 7 (G7),


Zone 4 controls all DALI controllers under Group 8 (G8).

2. When the color temperature panel is set to broadcast mode (X=9), all DALI controllers/DALI dimming drivers on this DALI bus can be controlled at the same time.

In this case, recommend the use of a single-zone color temperature panel (example: TD2-S).

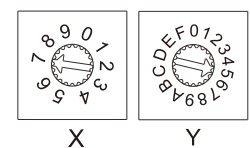


7 4 DALI controllers with 4-zone DALI RGBW panel, set the DALI address through the controller buttons to realize zoned dimming and color adjustment effects.

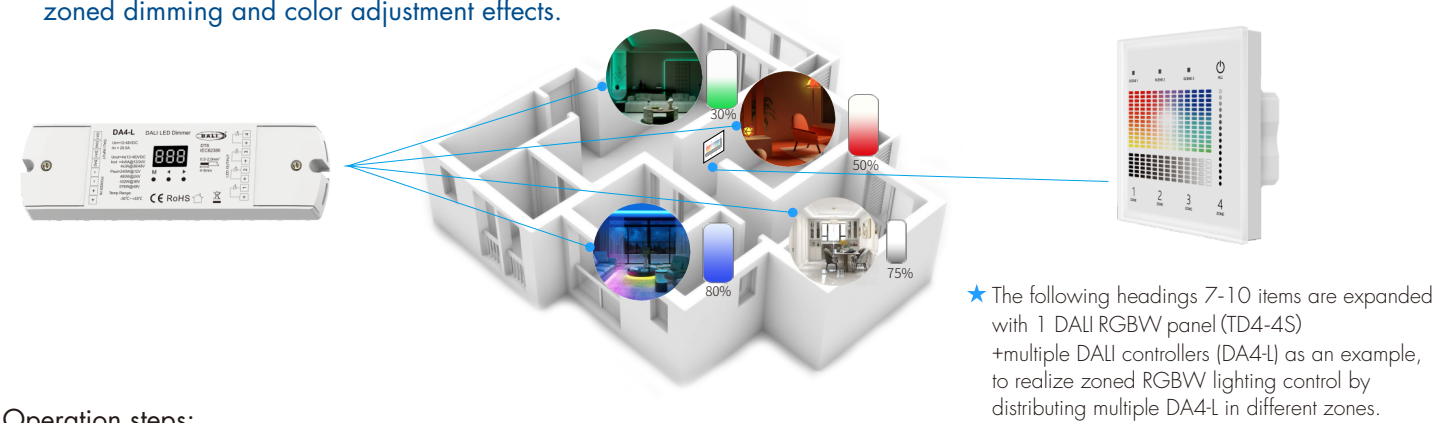

Operation steps:


1. Set the DALI addresses of the four DALI controllers (DA4-L) separately

- Step 1: Setting the DA4-L controller to the RGBW type output, that is, 1 DA4-L controller occupies 1 DALI address.
First long press M key for 2s, then short press ◀ or ▶ key to select "C4".
- Step 2: Set the DALI addresses of the four DA4-L controller to A44,A45,A46 and A47 respectively.
First Long press ◀ or ▶ key for 2s, then short press ◀ or ▶ key to set DALI address.
- Step 3: The default PWM frequency of DA4-L controller is 2 KHz.
Try modifying the PWM frequency if the cell phone is shooting lights with significant ripple or if the switching power supply is noisy.
Long press M & ◀ key for 2s, then short press ◀ or ▶ key to select different PWM frequency, for example, select "F80" (8KHz).

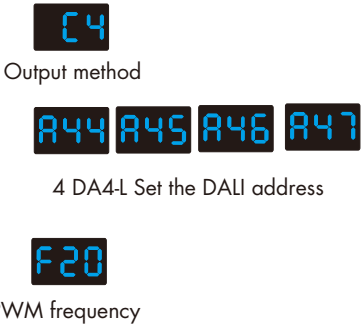


2. Sets the address of the 4-zone DALI RGBW panel (TD4-4S)

Addresses are set through knobs on the back of the panel, for example, set the two knobs to X=4 and Y=4.
At this time, zone 1, 2, 3, and 4 will control the DALI controllers for addresses A44, A45, A46 and A47 respectively.

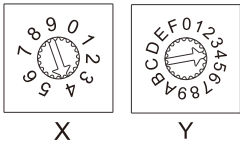


3. 4-zone DALI RGBW panel (TD4-4S) function

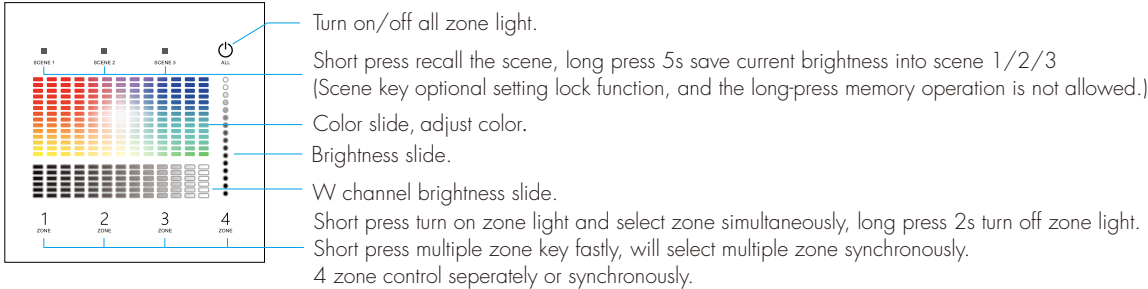


8 Set address, group, scene and system parameters of the color type DT8 device by the host computer.

Each lamp has an independent address, a standard DALI bus link can control up to 64 lamps, if more than this number, require another DALI bus link to control. To realise single-lamp or group control, address assignment and group setting of the control device should be carried out first. Set address, group, scene and system parameters on the host computer based on the application scenario. For DALI constant voltage/current controllers or DALI dimmable drivers without address setting keys or displays, short address (Short Address) assignment can only be performed by the host computer.

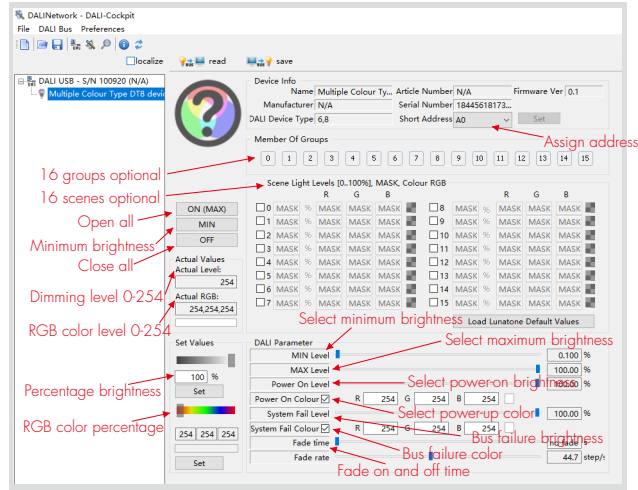

- Example:
1. Select device, assign address
Click "Short Address" and select addresses A0-A63.
 2. Setting Group
Under "Member Of Groups", click 0-15 to set the group.
 3. Setting the scene
Under Scene Light Levels, click 0-15 and set the brightness, R/G/B values in the MASK value (0-100%).
 4. Setting DALI system parameters
Slide the "MIN/MAX Level" bar to set the min/max brightness respectively;
Slide the "Power On Level" bar to set the power-on default brightness;
Edit "Power On Colour" to set the power-on default R/G/B mixing color values;
Slide the "System Fail Level" bar to set the bus fault brightness;
Edit "System Fail Colour" to set the bus fault R/G/B mixing color value;
Slide the "Fade time/Fade rate" bar to set the fading time/fading speed respectively.

9 Through the host computer to realize the precise dimming and color adjustment control of single lamp or group.

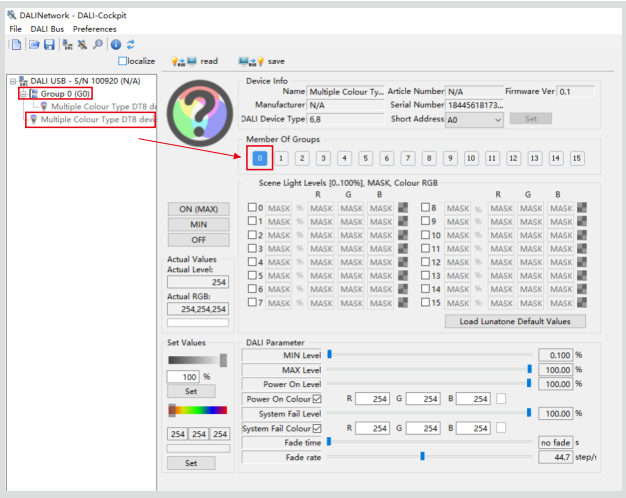

1. Single lamp control

For DALI controllers with set keys and display, set the DALI address by key. Long press ◀ or ▶ key for 2s, enter DALI address setting status. then press ◀ or ▶ key to set the value of DALI address. Setting range is 00-63-FF (FF means unassigned address). For example: The controller sets the 01 address and controls the lamp at the 01 address.



For DALI controllers without set keys and displays, address assignment can only be done by the host computer. Select a device, click "Short address" to assign address, and the set range is A0-A63. For example: select A1, controls the lamp at the 01 address. Then select A1 from the device list on the left, set the light brightness (Actual Level), click ON (Max) or Off to turn on /off light, to realize the brightness adjustment and on/off control control of 01 address lamps.

2. Group control


When using the group control method, multiple DALI controllers need to be grouped by the host computer, and different DALI controllers are assigned to the same group for group control. For example: click A1 device, select the 0th group among 16 groups, and then click A2 device, the same select the 0th group among 16 groups, and so on, to assign the devices that need group control to the same group. Then select Group 0(G0) from the device list on the left, set the light brightness (Actual Level), click ON (Max) or Off to turn on /off light, to realize the brightness adjustment and on/off control of Group 0(G0).

10 Multiple DALI controllers with 4-zone DALI RGBW panel for multi-light multi-group control.

1. When multiple DALI controllers have been set up in groups via the host computer, you can select the group mode through the panel for zoning control, each 4-zone RGBW panel (TD4-4S) can control four consecutive group address.

Example: Group multiple DALI controllers according to the application requirements, set Group 5 (G5), Group 6 (G6), Group 7 (G7), Group 8 (G8) group address respectively. Then set the two knobs on the back of the RGBW panel to X=7 and Y=5, that is, the group address value corresponding to partitions 1, 2, 3 and 4 are set to 5, 6, 7 and 8 respectively.

Zone 1 controls all DALI controllers under Group 5 (G5),
Zone 2 controls all DALI controllers under Group 6 (G6),
Zone 3 controls all DALI controllers under Group 7 (G7),
Zone 4 controls all DALI controllers under Group 8 (G8).

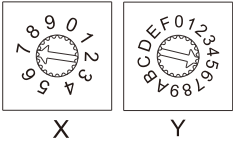

2. When the RGBW panel is set to broadcast mode (X=9), all DALI controllers/DALI dimming drivers on this DALI bus can be controlled at the same time. In this case, recommend the use of a single-zone RGBW panel (example: TD4-S).