


2 Channel Constant Voltage Power Repeater

- 12-36V constant voltage power repeater.
- 2 channel, 8A per channel.
- To receive PWM signal control.
- Parallel connection enables unlimited output power expansion.
- Apply to single color or color temperature constant voltage LED strip or module.

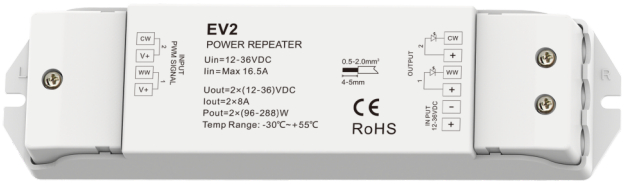


CE RoHS


Technical Parameters

Input and Output		Warranty and Protection		Safety and EMC	
Input voltage	12-36VDC	Warranty	5 years	EMC standard	EN IEC 55015/EN IEC 61547
Input current	16.5A	Protection	Reverse polarity	Safety standard	EN 61347-1/-2
Input signal	PWM		Over-heat	Certification	CE RoHS
Output voltage	2 x (12-36)VDC	Environment		Package	
Output current	2CH,8A/CH	Operation temperature	Ta: -30℃ ~ +55℃	Size	L178 x W50 x H38mm
Output power	2 x (96-288)W	Case temperature (Max.)	Tc: +85℃	Gross weight	0.128kg
Output type	Constant voltage	IP rating	IP20		

Mechanical Structures and Installations

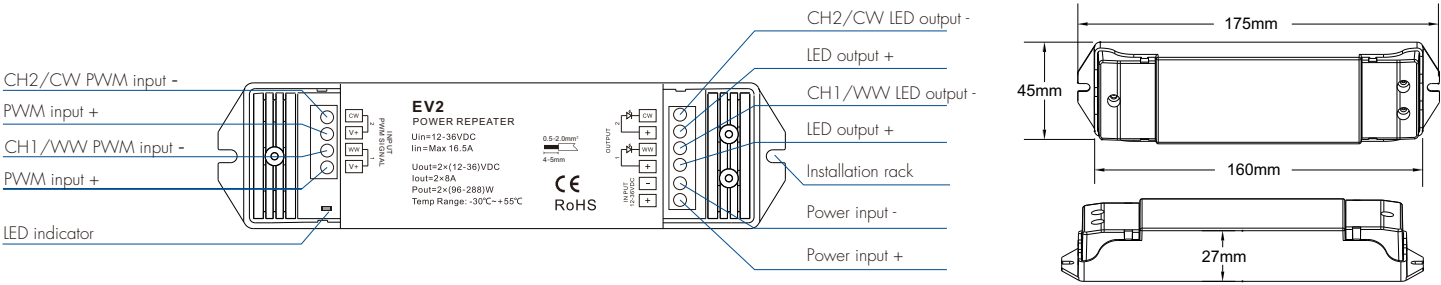

Wiring Diagram

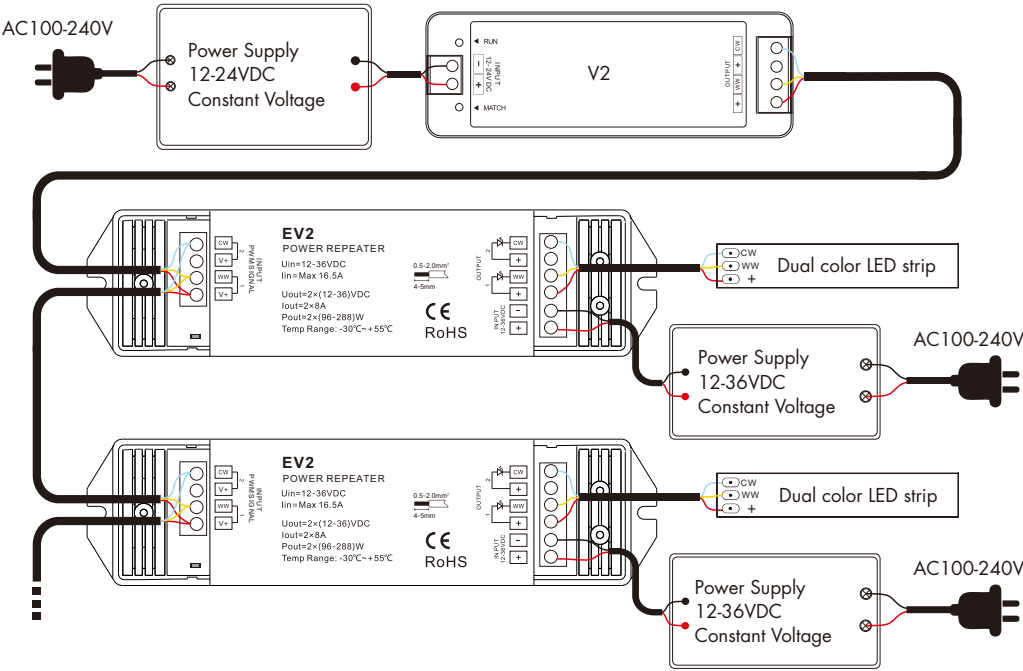

- Note:
1. When the power repeater is overheated or short-circuited, the LED indicator will keep flashing.
 2. If the input PWM frequency is $\geq 8000\text{Hz}$, it is recommended to reduce the output current to below 70% for use to avoid the product overheating to activate overheat protection.

Malfunctions Analysis & Troubleshooting

Malfunctions	Causes	Troubleshooting
No light	1.No power. 2.Wrong connection or insecure.	1. Check the power. 2. Check the connection.
Wrong color	1. Wrong connection of WW/CW wires.	1. Reconnect WW/CW wires.
Uneven intensity between front and rear,with voltage drop	1. Output cable is too long. 2. Wire diameter is too small. 3. Overload beyond power supply capability. 4. Overload beyond controller capability.	1. Reduce cable or loop supply. 2. Change wider wire. 3. Replace higher power supply. 4. Add power repeater.

Safety & Warnings

- 1. The product shall be installed and serviced by a qualified person.
- 2. This product is non-waterproof. Please avoid the sun and rain.
- 3. Good heat dissipation will prolong the working life of the controller, Please ensure good ventilation.
- 4. Please check if the output voltage of any power supplies used comply with the working voltage of the product.
- 5. Ensure all wire connections and polarities are correct and secure before applying power to avoid any damages to the LED lights.
- 6. If a fault occurs please return the product to your supplier. Do not attempt to fix this product by yourself.