


Wall Mounted Touch DALI Panel

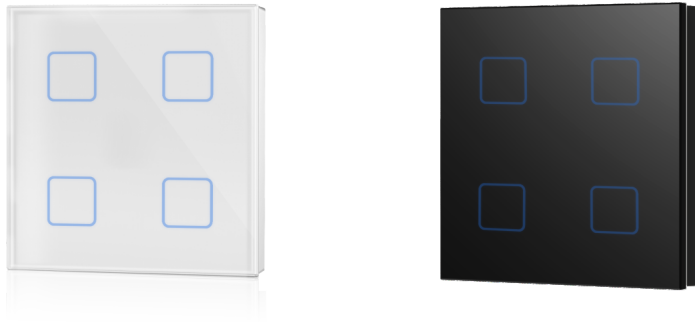


CE RoHS

- 4-button touch panel DALI master, control 4 DALI Addresses.
- Comply to latest DALI standard protocol IEC62386 and in compliance with DALI products from other international incorporation.
- Powered by DALI bus or 24VDC.
- Enable to select 4 different addresses for controlling by encoding switch.
- Support scene, group, unicast and broadcast mode.
- Ultra sensitive high strength glass touch panel.
- Each button with blue LED indicator.
- White & Black glass panel available.


Technical Parameters

Input and Output		Environment		Safety and EMC	
Power input	DALI bus/24VDC	Operation temperature	Ta: -20°C ~ +50°C	EMC standard	EN IEC 55015/ EN IEC 61547
Static current	15mA@16VDC, 2mA@24VDC	Case temperature (Max.)	Tc: +55°C		
Input signal	Touch key	IP rating	IP20	Safety standard	EN 61347-1/-2
		Package		Certification	CE RoHS
		Size	L112x W112 x H50mm	Warranty	
		Gross weight	0.223kg	Warranty	5 years

Mechanical Structures and Installations

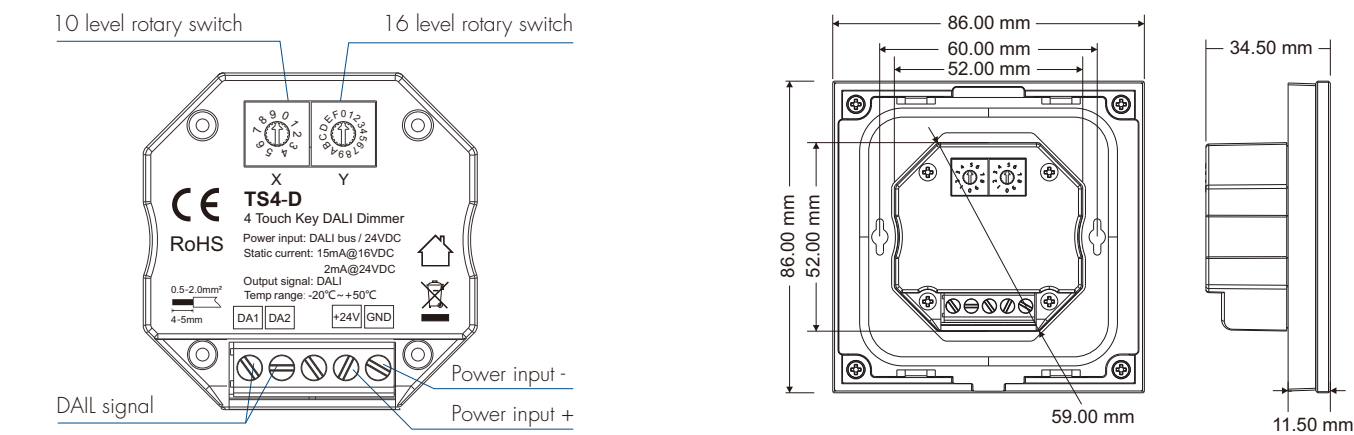


Installation diagram:

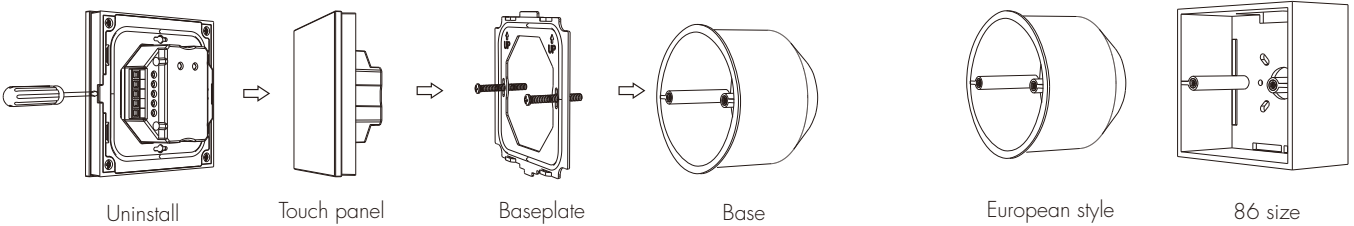


Wiring Diagram

- Powered by DALI bus

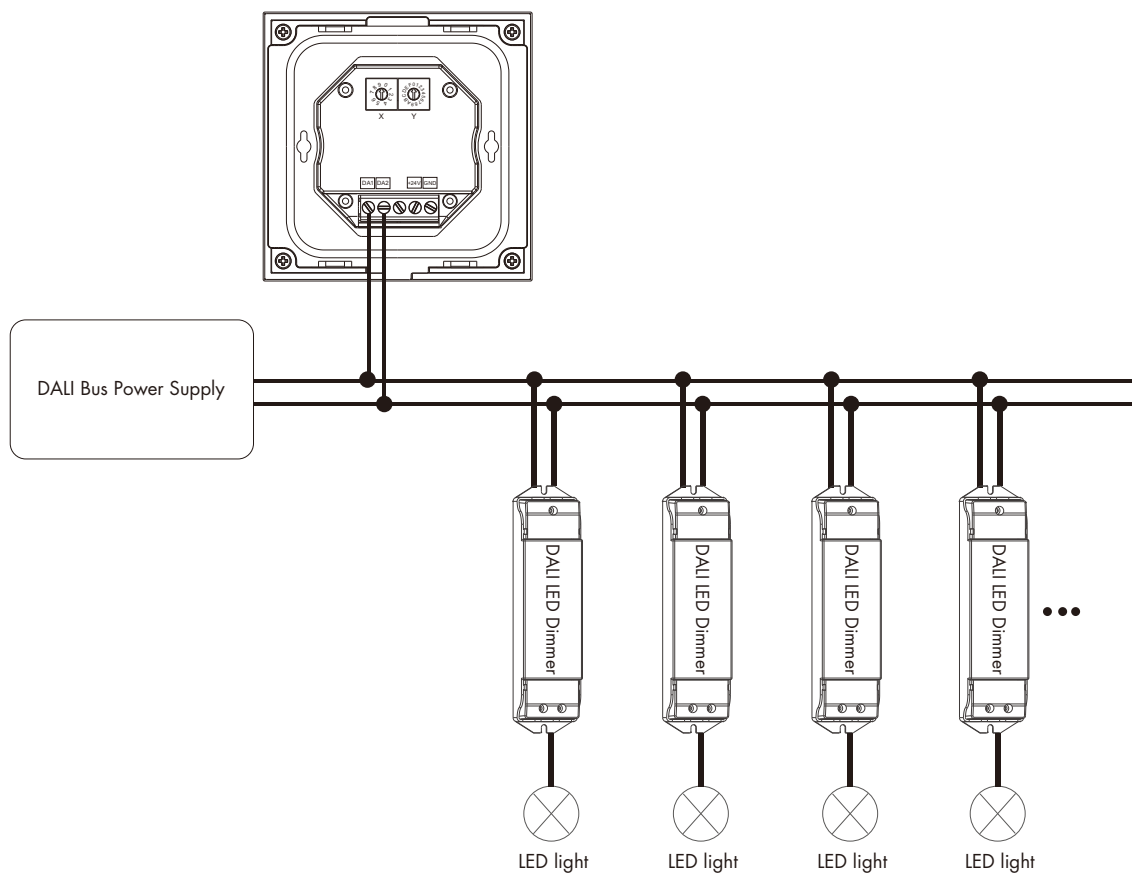


- Powered by 24VDC

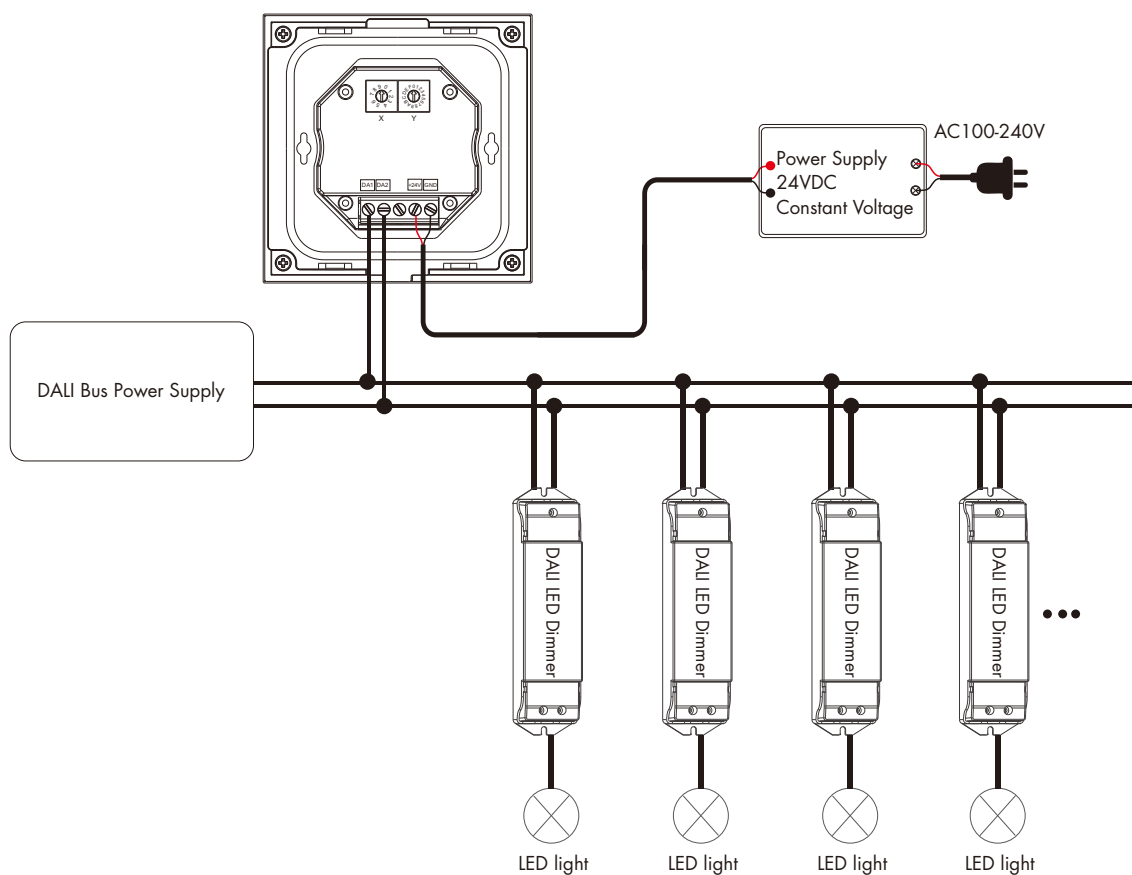

Note:

1. This product does not have a built-in DALI bus power supply and needs to be used with a DALI bus power supply.
2. It is recommended to use a 24VDC power supply for the touch panel DALI master to reduce the load on the DALI bus power supply.

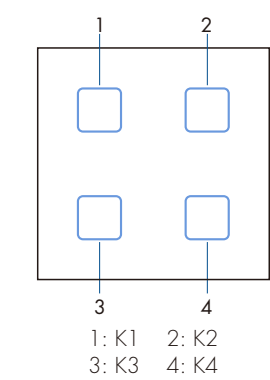


Sound feedback:
Buzzing sound feedback will be played when buttons being touched.
Long press on any two buttons simultaneously >5 seconds will activate (blinking 4 times) or deactivate (blinking 2 times) the sound feedback function.

DALI Address Setting


Address value = X * 10 + Y.
For example: X = 5, Y = 4, Address value = 5 x 10 + 4 = 54.

Unicast mode

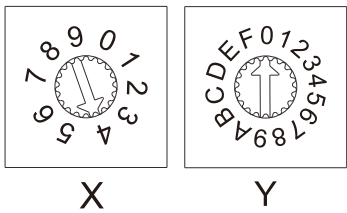


X is 0-6, Y is 0-9.
Address value 0-63 correspond to DALI unicast address 00-63.
For example:
Address value = 40, the unicast values of K1, K2, K3, K4 button are 40, 41, 42, 43.
Address value = 62, the unicast values of K1, K2, K3, K4 button are 62, 63, 0, 1.
Short press K1, K2, K3, K4 to turn on/off light.
Long press K1, K2, K3, K4 to increase or decrease brightness.

Group mode

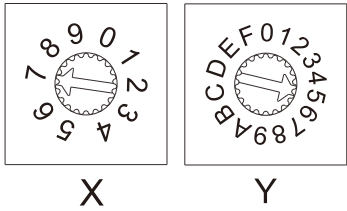


X is 7, Y is 0-F.
Address value 70-7F correspond to DALI group address 0-15.
For example:
Address value = 5, the group address value of K1, K2, K3, K4 button are 5, 6, 7, 8.
Address value = E, the group address value of K1, K2, K3, K4 button are 14, 15, 0, 1.
Short press K1, K2, K3, K4 to turn on/off light.
Long press K1, K2, K3, K4 to increase or decrease brightness.

Scene mode

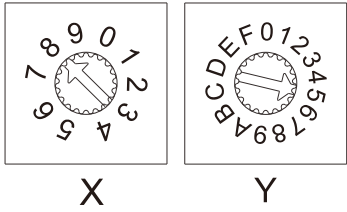

X is 8, Y is 0-F.
Address value 80-8F correspond to DALI scene 0-15.
For example:
Address value = 5, the scene value of K1, K2, K3, K4 button are 5, 6, 7, 8.
Address value = E, the scene value of K1, K2, K3, K4 button are 14, 15, 0, 1.
Short press K1, K2, K3, K4 to recall the scene.
Long press K1, K2, K3, K4(2s) to turn off the scene light.

Broadcast mode

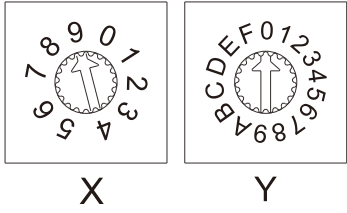

X is 9, Y is 0-F.
Address value 90 - 9F correspond to broadcast address.
Short press K1, K2, K3, K4 to turn on/off light,
long press K1, K2, K3, K4 to increase or decrease brightness.