

# V3-M, V3-M(CJ), V3-M(DJ)

## RGB LED Mini RF Controller

RF RGB




V3-M

Cable In /Cable Out Version



V3-M(CJ)

Cable In /4P Female Jack Out Version

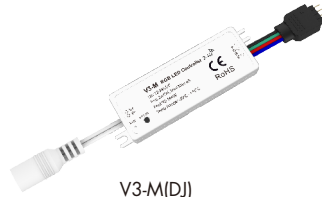

V3-M(DJ)

DC Female Jack In /4P Female Jack Out Version

CE RoHS

### Features

- 3 channel constant voltage RGB LED mini RF controller.
- 2A per channel, output connect with 5 meters RGB LED strip.
- Match with RF 2.4G single zone or multiple zone RGB/RGBW remote control.
- One RF controller accept up to 5 remote control.
- 4096 levels 0-100% dimming smoothly without any flash.
- Built in 10 dynamic mode, include jump or gradual change style.
- Light on/off fade time 3s selectable.
- Auto-transmitting function: Controller automatically transmit signal to another controller with 30m control distance.
- Synchronize on multiple number of controllers.


### Model List

| Model    | Photo | Power Connector      | LED Connector               |
|----------|-------|----------------------|-----------------------------|
| V3-M     |       | Red/Black Cable 10cm | 4-color Flat Cable 10cm     |
| V3-M(CJ) |       | Red/Black Cable 10cm | 4-pin Flat Female Jack 10cm |
| V3-M(DJ) |       | 5.5mm DC Female Jack | 4-pin Flat Female Jack 10cm |


### Technical Parameters

| Input and Output        |                         | Dimming data     |                         | Safety and EMC  |                                                       |
|-------------------------|-------------------------|------------------|-------------------------|-----------------|-------------------------------------------------------|
| Input voltage           | 12-24VDC                | Input signal     | RF 2.4GHz               | EMC standard    | EN IEC 55015/<br>EN IEC 61547<br>ETSI EN 301 489-1/-3 |
| Output voltage          | 12-24VDC                | Control distance | 30m(Barrier-free space) | Safety standard | EN 61347-1/-2                                         |
| Output current          | 2A/CH,<br>Total Max. 6A | Dimming level    | 4096 (2^12) levels      | Radio Equipment | ETSI EN 300 440                                       |
| Output type             | Constant voltage        | Dimming range    | 0 -100%                 | Certification   | CE RoHS                                               |
| Environment             |                         | Dimming curve    | Logarithmic             | Package         |                                                       |
| Operation temperature   | Ta: -30℃ ~ +55℃         | PWM Frequency    | 2KHz (default)          | Size            | L90 x H130mm                                          |
| Case temperature (Max.) | Tc: +85℃                | Warranty         |                         | Gross weight    | 0.021kg                                               |
| IP rating               | IP20                    | Warranty         | 5 years                 |                 |                                                       |

### Dimension

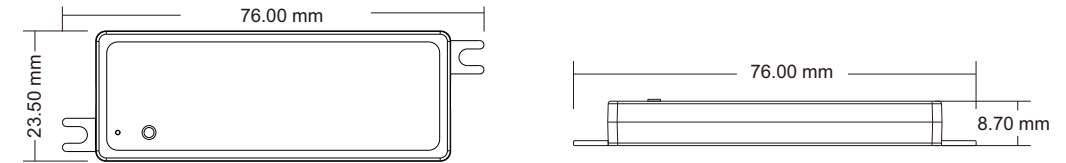

### Wiring Diagram

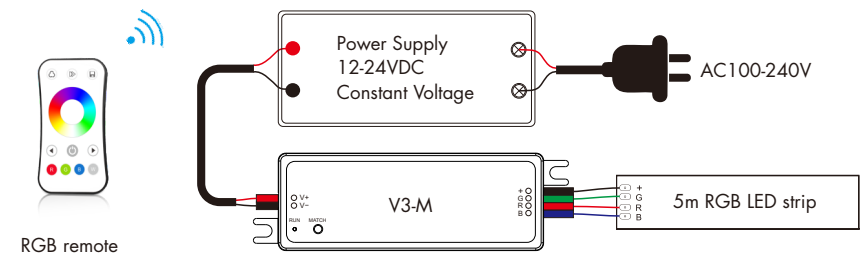

## Match Remote Control

End user can choose the suitable match/delete ways. Three options are offered for selection:

### Use the controller's Match key

#### Match:

Short press match key,  
immediately press on/off key (single zone remote)  
or zone key (multiple zone remote) on the remote.  
The LED indicator fast flash a few times means match  
is successful.

#### Delete:

Press and hold match key for 5s to delete all match,  
the LED indicator fast flash a few times means all matched remotes  
were deleted.

### Use Power Restart

#### Match:

Switch off the power of the receiver, then switch on power.  
Immediately short press on/off key (single zone remote)  
or zone key (multiple zone remote) 3 times on the remote.  
The light blinks 3 times means match is successful.

#### Delete:

Switch off the power of the receiver, then switch on power.  
Immediately short press on/off key (single zone remote)  
or zone key (multiple zone remote) 5 times on the remote.  
The light blinks 5 times means all matched remotes  
were deleted.

#### Another way to match:


The receiver is power on for five consecutive times,  
the LED strip light start blinking slowly for 10s,  
Immediately short press on/off key (single zone remote)  
or zone key (multiple zone remote) on the remote.  
The light blinks 3 times means match is successful.

## Light on/off Fade Time

Long press match key 5s, then short press match key 3 times, the light on/off time will be set to 3s, the indicator light blink 3 times.  
Long press match key 10s, restore factory default parameter, the light on/off time also restore to 0.5s.

## RGB Dynamic Mode List


### 1: RGB jump




### 2: RGB smooth




### 3: 6 color jump




### 4: 6 color smooth



### 5: Yellow cyan purple smooth




### 6: RGB fade in and out



### 7: Red fade in and out




### 8: Green fade in and out




### 9: Blue fade in and out



### 10: White fade in and out



## Dimming curve

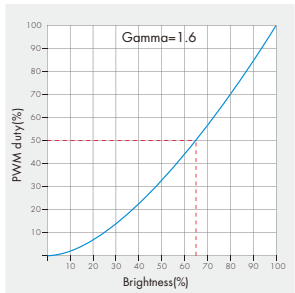

## Malfunctions Analysis & Troubleshooting

| Malfunctions                | Causes                                                                                                          | Troubleshooting                                                              |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| No light                    | 1. No power.<br>2. Wrong connection or insecure.                                                                | 1. Check the power.<br>2. Check the connection.                              |
| Wrong color                 | 1. Wrong connection of R/G/B wires.                                                                             | 1. Reconnect R/G/B wires.                                                    |
| No response from the remote | 1. The battery has no power.<br>2. Beyond controllable distance.<br>3. The controller did not match the remote. | 1. Replace battery.<br>2. Reduce remote distance.<br>3. Re-match the remote. |

## Installation Precautions

1. The products shall not be stacked, the distance should be  $\geq 20\text{cm}$ , so as not to affect lifespan of the products due to poor heat dissipation.
2. The product shall not be installed close to the switching power supply with an interval of  $\geq 20\text{cm}$  to avoid radiation interference of the switching power supply.
3. The installation height shall be  $\geq 1\text{m}$  from the floor to avoid shortening the remote control distance due to too weak reception signal.
4. The products are not allowed to be close to or covered by metal objects, with an interval of  $\geq 20\text{cm}$  to avoid signal attenuation and shorten the remote distance.
5. Avoid installation at the corner of the wall or the corner of the beam, with an interval of  $\geq 20\text{cm}$  to avoid signal interference.