

Cabinet LED Control

CV1(WZ)


Zigbee + RF + Sensor Synchronous DIM 6 CH LED Control Box

Features

- Dimming interface: WiFi, RF Wireless and sensor
- Tuya smart APP cloud control, support brightness adjust, delay turn on/off light, timer run, scene edit function
- Philips HUE APP control by connect with Philips HUE bridge
- Voice control, support for Amazon Alexa, Google Assistant, Tmall Genie and Xiaodu voice assistant
- Match with RF 2.4G single zone or multiple zone dimming remote control
- Match with a variety of induction sensor head
- 12-24VDC Input
- 6 channel synchronous constant voltage output, Max. total output power 150W
- Ultra-thin design, light weight and high efficiency
- Light on/off fade time 3s selectable
- Suitable for indoor LED lighting application
- 5 Year, 50,000hr warranty


Applications

- Suitable for cabinet LED strip.

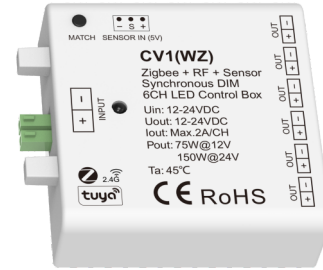


CE RoHS

Mechanical Structures and Installations

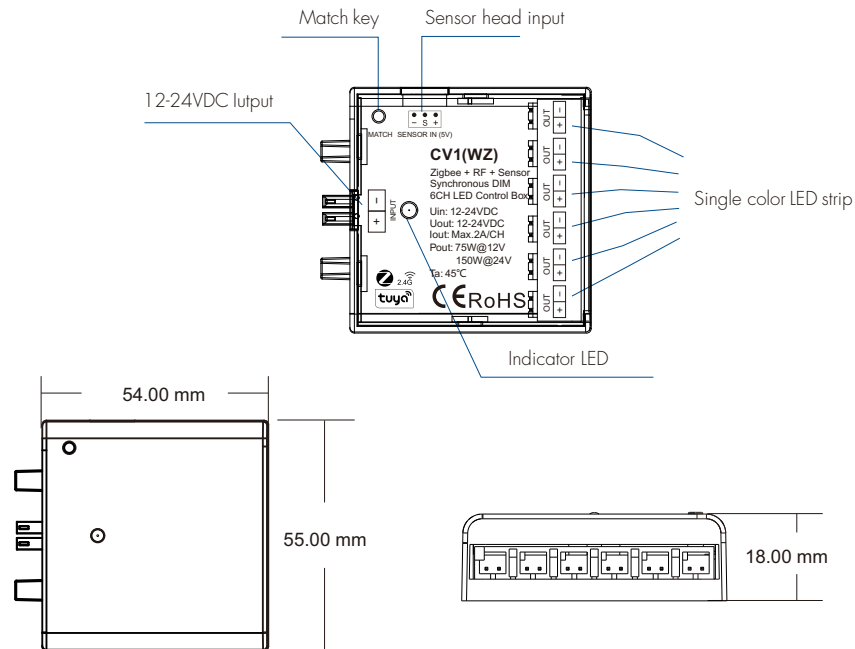

System Wiring

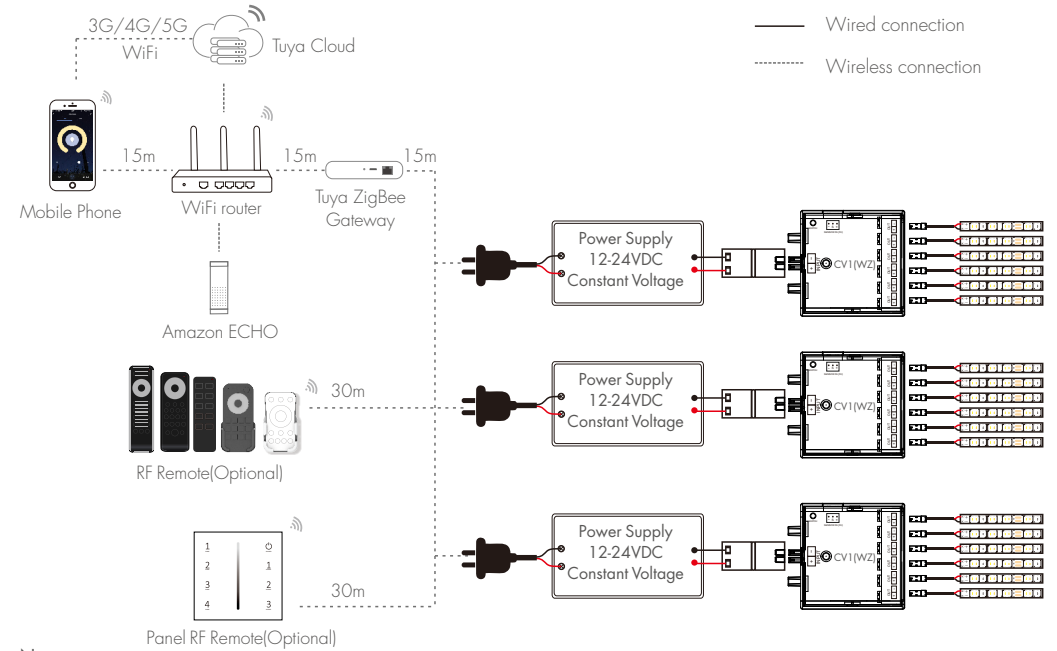


Note:


1. The above distance is measured in spacious (no obstacle) environment, Please refer to the actual test distance before installation.
2. Please check if the WiFi router net in 2.4G band, the 5G band is not available, and do not hide your router network.
3. Please keep the distance between LED driver and router close, and check the WiFi signals.
4. Users must use the Tuya ZigBee gateway to realize remote control and voice control.

Wiring Diagram

1. Use alone, powered by constant voltage power supply

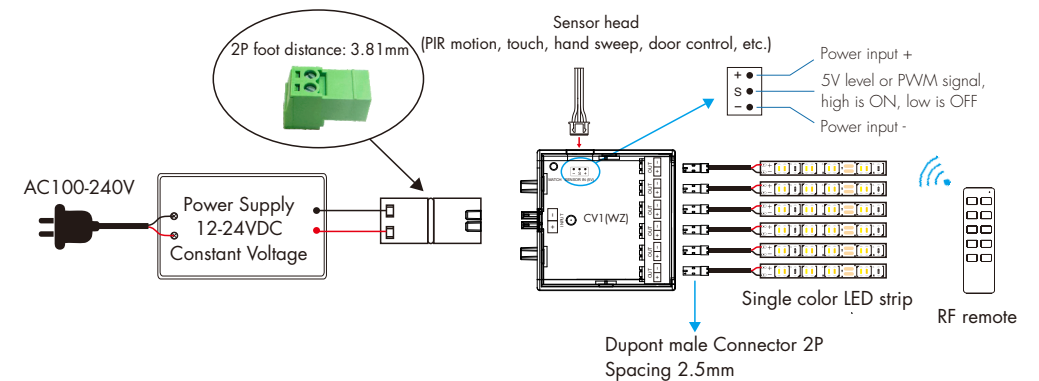

2. Matching cabinet LED driver use

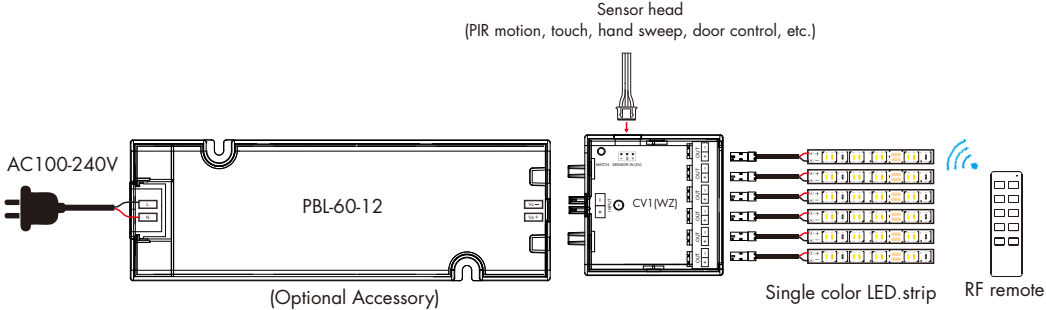

Match Remote Control

The control box can match with RF 2.4G dimming remote control optionally by default, except PIR motion sensor input. For PIR motion sensor input, please long press the MATCH key 20s to disable the RF remote match function. For other sensor input, please long press the Match key 10s to enable the RF remote match function. The user can choose the suitable match/delete ways. Two options are offered for selection:

Use Match key

Match:
Short press match key,
immediately press on/off key (single zone remote)
or zone key (multiple zone remote) of the remote.

Delete:
Press and hold match key for 10s to delete all match,
The light blinks 5 times means all matched remotes
were deleted.

Use Power Restart

Match:
Switch off the power, then switch on power, repeat again.
Immediately short press on/off key (single zone remote)
or zone key (multiple zone remote) 3 times on the remote.
The light blinks 3 times means match is successful.

Delete:
Switch off the power, then switch on power, repeat again.
Immediately short press on/off key (single zone remote)
or zone key (multiple zone remote) 5 times on the remote.
The light blinks 5 times means all matched remotes were deleted.

Tuya Smart APP Network Connection and Operation


Please download the corresponding Tuya smart / smart life APP according to your region.

Press and hold Match key for 5s, or push twice Match key fastly,
Clear previous network connection, enter config mode, the blue LED indicator flash fastly.

Repeat power on and off for 5 consecutive times, also clear previous network connection,
enter config mode, the output LED will flash 10 times.

If Tuya smart APP network connection succeed, the blue LED indicator will stop flash,
and in Tuya smart APP, you can find ZB-DIM device.


Tuya smart APP interface operation:
Touch brightness slide to adjust brightness.

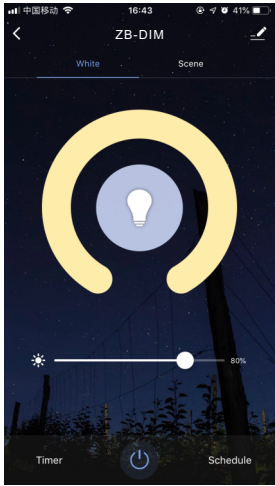

Light On/Off Fade Time


Long press match key 10s, then short press match key 3 times, the light on/off time will be set to 3s, the indicator light blink 3 times. Long press match key 15s, restore factory default parameter, the light on/off time also restore to 0.5s.

Installation Precautions

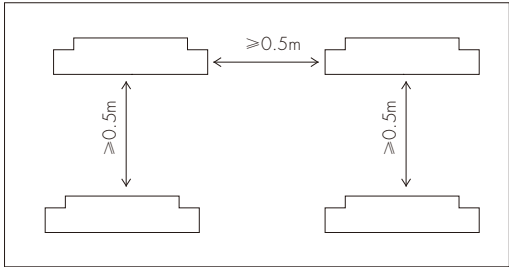

Please do not stack the products.
The distance between two products should be $\geq 0.5m$,
so as not to affect heat dissipation and lifespan of the products.

Dimming Curve

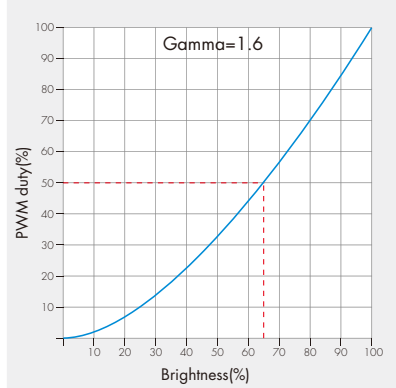


Failure Analysis and Troubleshooting

Fault	Cause	Solution
The light can not be turned on	1. No power 2. Wrong wiring	1. Check the power supply 2. Connection test
Remote control not response	1. Run out of battery 2. Beyond remote control range 3. No matching	1. Replace the battery 2. Move the remote to controller closer 3. Match the remote to LED driver
Hiccup flashing	Overload	Check the power of the light
Controlled by other remote	Wrong match	Delete all match and match with remote again
Multiple LED controllers are out of sync	Inconsistent fade on/off time	Set the same fade on/off time

Packing List



LED Control Box
1 pcs



User Manual
1 pcs



2P Terminal
1 pcs



Slotted
screwdriver
1 pcs